



# Dyson v6 Absolute Bin Replacement

In case the bin of the Dyson v6 Absolute detaches, it is easily reattached and snapped into place.

Written By: Tabitha Espina Velasco



## INTRODUCTION

The bin of the Dyson v6 Absolute should be regularly cleared of debris for the device to function properly. The bin is easily and hygienically emptied.

## Step 1 — Bin



- Unplug the device.

## Step 2



- Push down the red lever located on the outside of the bin, next to the device handle.
- Avoid pressing the trigger on the handle opposite the red lever, which activates the motor.



## Step 3



- Push the red lever down a second time to release the bin.
- Avoid pressing the trigger on the handle opposite the red lever, which activates the motor.

## Step 4



- Pull bin away from the cyclone.

To reassemble your device, follow these instructions in reverse order.